

# How to read your solar meter

\*Order of codes during a cycle of screens may not be consistent but below is their usual order

## Bi-directional Meters

Meter Code	Meaning	Notes
Check	88888888	Check of display
	Communication codes for techs	Varies depending on signal on
KWh	Total Billing Consumption	(kWh)Delivered by Trico
DEL	Total Billing Consumption	(kWh)Delivered by Trico
REC	Total Billing Received	(kWh)Received by Trico
INS	Instant kW (Demand)	Demand at this point in time
<b>Open / Close</b>	<b>Closed when power is connected</b>	<b>Only on meters with a disconnect collar</b>
DT	Date	
TM	Time	

## Solar Output Meters

Meter Code	Meaning	Notes
Check	88888888	Check of display
DT	Date	Date
TM	Time	Time
KWh	Pure Generation	(kWh)Produced for home or grid
KW	Peak Demand	kW peak demand for Billing Cycle
INS	Instant kW demand delivered in to home	kW demand at this point in time
<b>Open / Close</b>	<b>Closed when power is connected</b>	<b>Only on meters with a disconnect collar</b>
GSS	Communication codes for techs	